 



Installation Guide: LA1 & LS1

#### **Materials Needed**




## **Aircraft Cable Mounting**


**1.** Put the hanging rope through fixation place and hole of the locker.

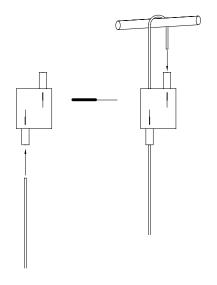


**2.** Connect hanging rope to V hook and match V hook to the holes available on the driver box.

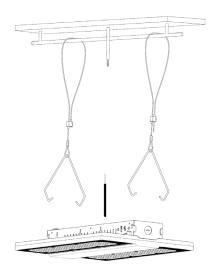

**3.** Complete the wiring per below details, access plate of AC cable can be opened if needed.

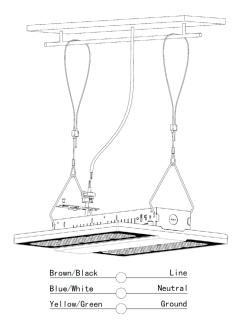


**4.** Adjust the length of the hanging cable by press the locker to a appropriate installation height.

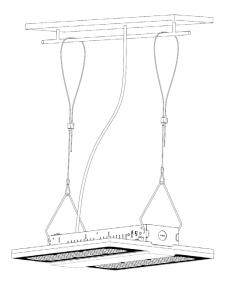




Installation Guide: LA1 & LS1

#### **Materials Needed**

 


### **Surface Mounting**


1. Drill 4 holes (diameter 6mm) on the ceiling with 40mm depth for the expansion screws per below dimension.

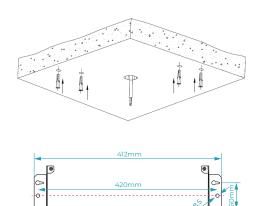


**2.** Fix the surface mount plate onto the light and fix the light onto the ceiling with 4pcs expansion screws.

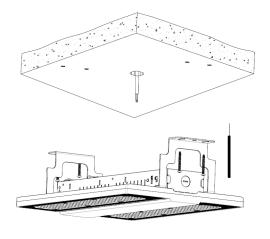


 3. Complete the wiring per below details.

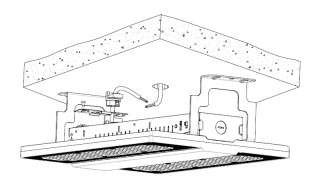



**4.** Access plate of AC cable can be removed for wiring, put back the access plate after wiring process.

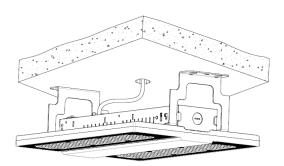



# **Linear Highbay**

Installation Guide: LA1 & LS1

- **WARNING** DISCONNECT OR TURN OFF POWER BEFORE INSTALLATION OR SERVICING.
- WARNING VERIFY THAT SUPPLY VOLTAGE IS CORRECT BY COMPARING IT WITH THE LUMINAIRE LABEL.
- **WARNING -** THE LUMINAIRE SHALL BE INSTALLED BY A QUALIFIED ELECTRICIAN AND WIRED IN ACCORDANCE WITH THE LATEST IEE OR NEMA ELECTRICAL REGULATIONS OR THE NATIONAL REQUIREMENTS.
- **WARNING -** MAKE ALL ELECTRICAL AND GROUNDED CONNECTIONS IN ACCORDANCE WITH ANY APPLICABLE LOCAL CODE REQUIREMENTS.
- **WARNING -** ALL WIRING CONNECTIONS SHOULD BE CAPPED WITH APPROVED RECOGNIZED WIRE CONNECTORS.
- WARNING ALLOW LAMP/FIXTURE TO COOL BEFORE HANDLING. DO NOT TOUCH ENCLOSURE OR LIGHT SOURCE.
- **WARNING -** FOLLOW ALL MANUFACTURER'S WARNINGS, RECOMMENDATIONS AND RESTRICTIONS FOR: DRIVER TYPE, BURNING POSITION, MOUNTING LOCATIONS/METHODS, REPLACEMENT AND RECYCLING.
- WARNING IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE IS DAMAGED, IT SHALL BE EXCLUSIVELY REPLACED BY THE MANUFACTURER OR HIS SERVICE AGENT OR A SIMILAR QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.
- WARNING THE LIGHT SOURCE OF THIS LUMINAIRE IS NOT REPLACEABLE; WHEN THE LIGHT SOURCE REACHES ITS END OF LIFE THE WHOLE LUMINAIRE SHALL BE REPLACED.
- **WARNING -** YOU MUST CONNECT THE INPUT POWER CABLE TO THE POWER SUPPLY USING THE SAME IP LEVEL AND A JUNCTION BOX WITH A CORD ANCHORAGE DEVICE.